

How to Install PedSafe® Gates

APPLIES TO PAUSE GATE




▲ Screw the top hinge first to the post




▲ Then attach and place the gate



▲ Line up closer plate

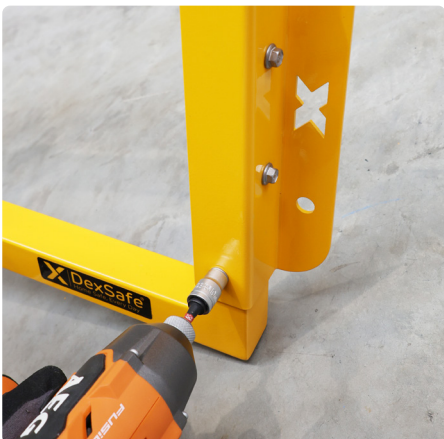

▲ Secure closer plate

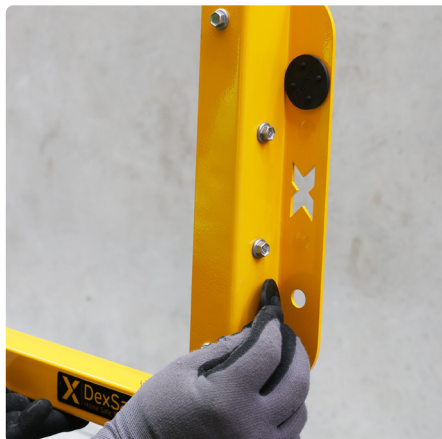

▲ Insert rubber pads into the closer plate



▲ Adjust hinge tension

- ➔ Post set-out for the PedSafe 1000mm wide gates is 1090mm c/c posts.
- ➔ Screw the top hinge first to the post, then attach and place the gate. Make sure the gate has a slight 2-3 degree lift across it as it will settle a bit over the next week or so.
- ➔ Secure bottom hinge to post and gate
- ➔ Screw on the closer plate to the gate with the screws provided.
- ➔ Adjust the hinge for closing speed with the small adjusters on the bottom of the hinge.

How to Install PedSafe® Gates

FOOTING DETAILS FOR INSTALLING INTO ASPHALT

