

# How to Install SpanSafe® Wall Mount Expandable

## SAFETY AND SECURITY BARRIER

- ➔ Lie barrier on floor and remove end poles.
- ➔ Line up brackets (2-3 depending on barrier size) and re-insert poles to include brackets.
- ➔ Position top bracket to wall or racking at approximately 1400mm high (floor to hole centre) and secure.
- ➔ Position bottom bracket at approximately 350mm high.
- ➔ Expand the barrier in order to correctly position lock latch to line up with lock bracket. Secure lock latch.
- ➔ Drop latch to secure.



▲ Lie barrier on floor and remove end poles



▲ Re-insert poles to include brackets



▲ Position top wall bracket and secure



▲ Position bottom wall bracket and secure




▲ Unlock castor wheel



▲ Expand barrier to position lock latch



▲ Secure lock latch

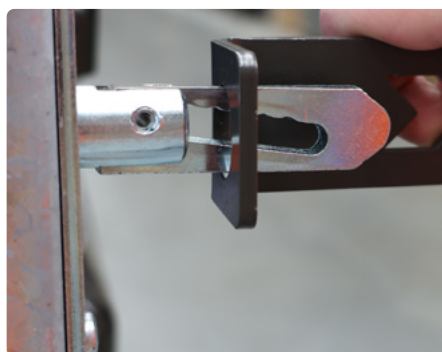

▲ Engage lock bracket onto lock latch



▲ Lift and drop latch to secure